


SAGE CINEMA HLS QUICK LOOK WIRING GUIDE

NOTE: Binding posts terminal covers removed for clarity

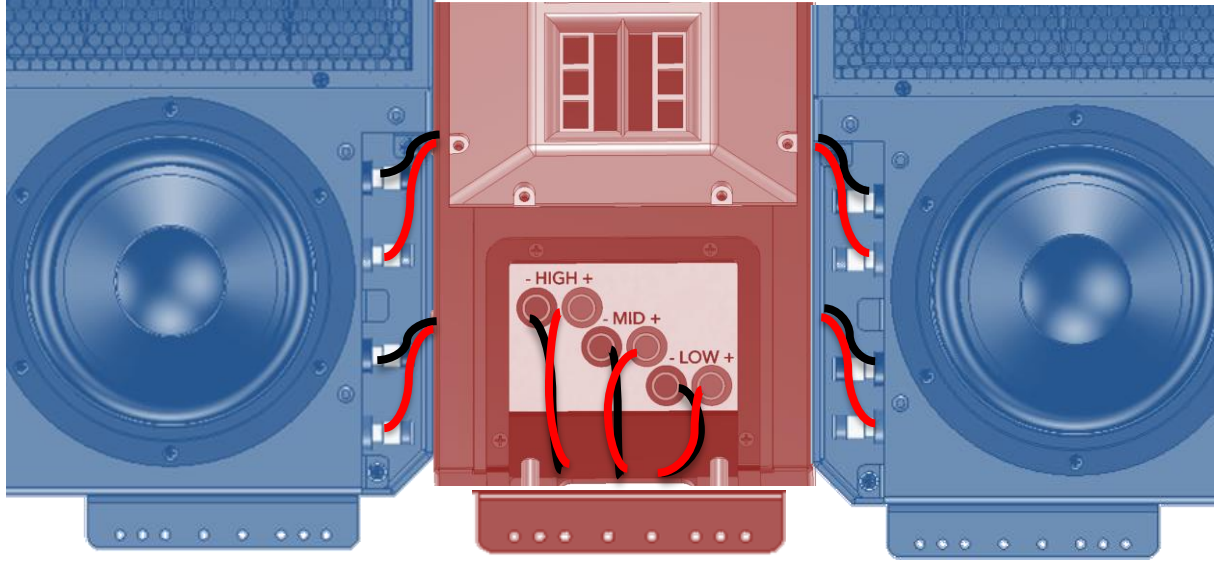

Three pairs of speaker wires from the amplifier are needed. One for Low, one for Mid, and one for High. Route wires through the access panel in the rear of the Center Module

First connect to the Center Module from the amplifier.

Then connect from the Center Module to the Line Modules on either side using the included jumper wires (fly leads).